

Key to Fig. 13.64

No	Description	Circuit diagram No Location	No	Description	Circuit diagram No Location
1	Front cigar lighter & lighting	VII 25 to 27	482	L/H rear direction indicator	VI 9
5	Distributor	IV 7 to 11	483	R/H direction indicator	VI 10
10	Alternator	II 1 to 6	488	L/H headlamp	II 9 to 10
25	Horn	III 21	489	R/H headlamp	II 11 to 12
45	Battery	I 2	500	L/H front loudspeaker	VII 29 to 30
46	Instrument panel	II 13 to 15	501	R/H front loudspeaker	VII 29 to 30
46	Instrument panel	V 1 to 26	511	Rear fog lamp switch	III 11 to 13
46	Instrument panel	VI 4 to 6	519	Driver's door window winder switch (R/H window)	VII 20 to 23
50	Ignition coil	IV 3 to 5	520	Driver's door window winder switch (L/H window)	VII 15 to 18
75	Ignition module	IV 5 to 8	521	R/H front window winder switch	VII 21 to 22
84	Water level indicator unit	V 6 to 8	530	Opening-roof switch	VIII 3 to 4
90	Door locking control unit	VII 17 to 25	532	Heated rear screen switch	III 16 to 18
145	Flasher unit (c)	VI 8 to 9	551	Rear wash/wipe switch	III 3 to 8
168	Battery connector	I 2 to 3	570	Hazard warning switch	VI 1 to 9
70	Boot lamp switch	VIII 26	580	Fuel gauge transmitter	V 14
180	Reversing lamp switch	VI 11	600	Windscreen wiper motor	II 19 to 25
185	Stop lamp switch	VI 13	601	Rear screen wiper motor	III 1 to 5
190	Handbrake switch	V 10	610	Opening-roof motor	VIII 3 to 6
225	Choke warning lamp switch	V 12	615	L/H front window motor	VII 15 to 18
229	Ignition switch	I 4 to 36	616	R/H front window motor	VII 21 to 22
230	Door switch (L/H front)	VIII 11	625	L/H front door lock motor	VIII 18 to 20
231	Door switch (R/H front)	VIII 13	626	R/H front door lock motor	VIII 21 to 23
235	Hydraulic fluid pressure switch	V 8	627	L/H rear door lock motor	VIII 18
236	Hydraulic fluid level switch	V 9	628	R/H rear door lock motor	VIII 27
237	Water level switch	V 6 to 7	629	Boot door lock motor	VIII 20 to 21
260	Lighting/Indicator/Horn switch	II 9 to 13	635	L/H engine cooling fan motor	VII 1
260	Lighting/Indicator/Horn switch	III 21	650	Low engine oil pressure switch	V 5
260	Lighting/Indicator/Horn switch	IV 7 to 8	658	Blower fan speed control module	VII 6
263	Front wash/wipe switch	II 18 to 22	680	Windscreen washer pump	II 18
278	Blower motor speed control	VII 8 to 12	681	Rear washer pump	III 7
285	Ignition coil capacitor	IV 1	691	L/H interior lamp	VIII 11 to 12
300	Starter motor	II 3 to 5	692	R/H interior lamp	VIII 14 to 15
370	Boot or interior lighting	VIII 26	695	Front interior spot lamp	VIII 9
385	L/H rear no plate lighting	II 19	721	Radio connections (12V & loudspeakers)	VII 28 to 30
386	R/H rear no plate lighting	II 18	745	Blower motor fast speed relay	VII 5 to 10
430	L/H front brake caliper	V 10 to 11	760	Heated rear screen electronic relay "R4"	III 17 to 19
431	R/H front brake caliper	V 12 to 13	761	Front window winder relay "R3"	VII 13 to 19
440	L/H front side lamp	II 16	763	Opening-roof relay	VIII 3 to 6
441	R/H front side lamp	II 17	765	Front wiper relay	II 21 to 24
442	L/H rear lamp	II 20	774	Engine cooling fan relay "R1"	VII 1 to 3
443	R/H rear lamp	II 21	795	Lighting rheostat	I 35
457	L/H stop lamp	VI 13	850	Engine cooling fan thermal switch	VII 1
458	R/H stop lamp	VI 14	855	Coolant temperature warning lamp switch	V 3
460	L/H rear fog lamp	III 11	935	Air conditioning fan	VII 5
461	R/H rear fog lamp	III 12	945	Heated rear screen	III 19
462	L/H reversing lamp	VI 11			
463	R/H reversing lamp	VI 12			
470	Fuses	I 23,24,35,39			
470	Fuses	II 15,20,21			
470	Fuses	III 11,19			
470	Fuses F5	VI 8			
470	Fuses F4, F9	VII 1, 19			
480	L/H front direction indicator	VI 7			
481	R/H front direction indicator	VI 8			

Harness code

A	Front	MB	Junction box earth
C	Switches	MF	Rear lamp cluster earth
CN	Negative cable	P	Interior lighting
CP	Positive cable	PC	Driver's door
E	Front wiper	PP	Driver's door
F	Rear light cluster connection	R	Rear
G	Tailgate LH side	RE	Rear wiper
H	Interior	T	Instrument panel
J	Fuel gauge	U	Brake pad wear
L	Boot lighting	V	Tailgate RH side
M	Engine		