

REMOVING-REFITTING : EVAPORATOR SENSOR

ESSENTIAL : Observe the safety and cleanliness recommendations ⓘ.

1. Removal

Disconnect the battery.

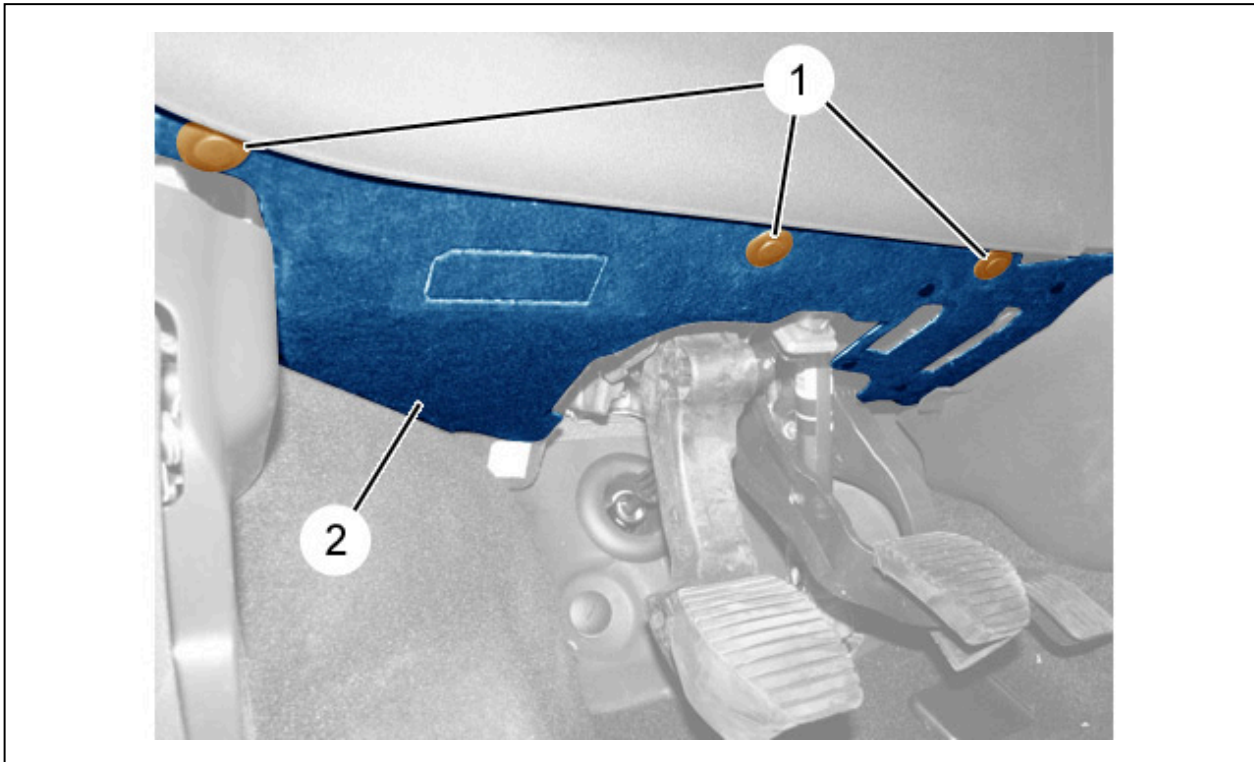


Figure : B3FG0JSD

Remove the pins (1).

Release : The trim under the dashboard (1).

Disconnect the connector of the lamp (If necessary).

Remove : The trim under the dashboard (1).

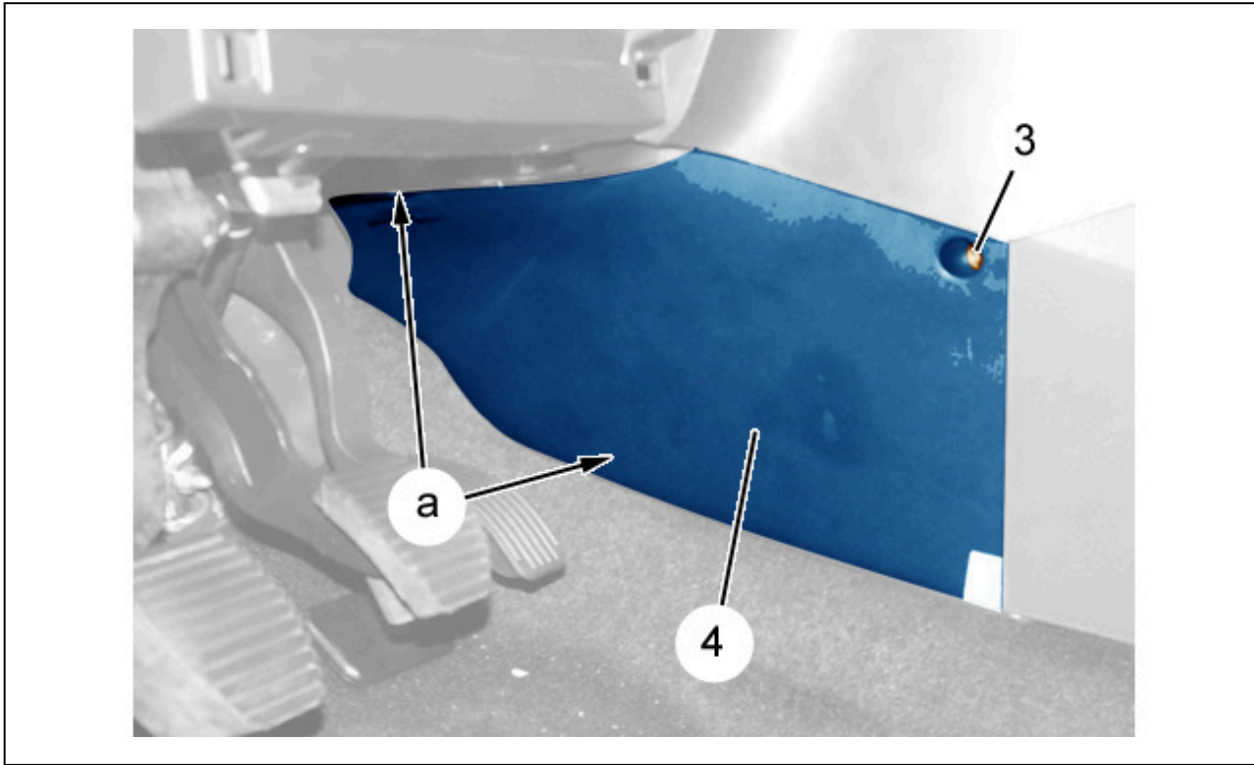


Figure : B3FG000D

- Remove the bolts (3).
- Unclip the trim (4) (at "a").
- Remove the trim (4).

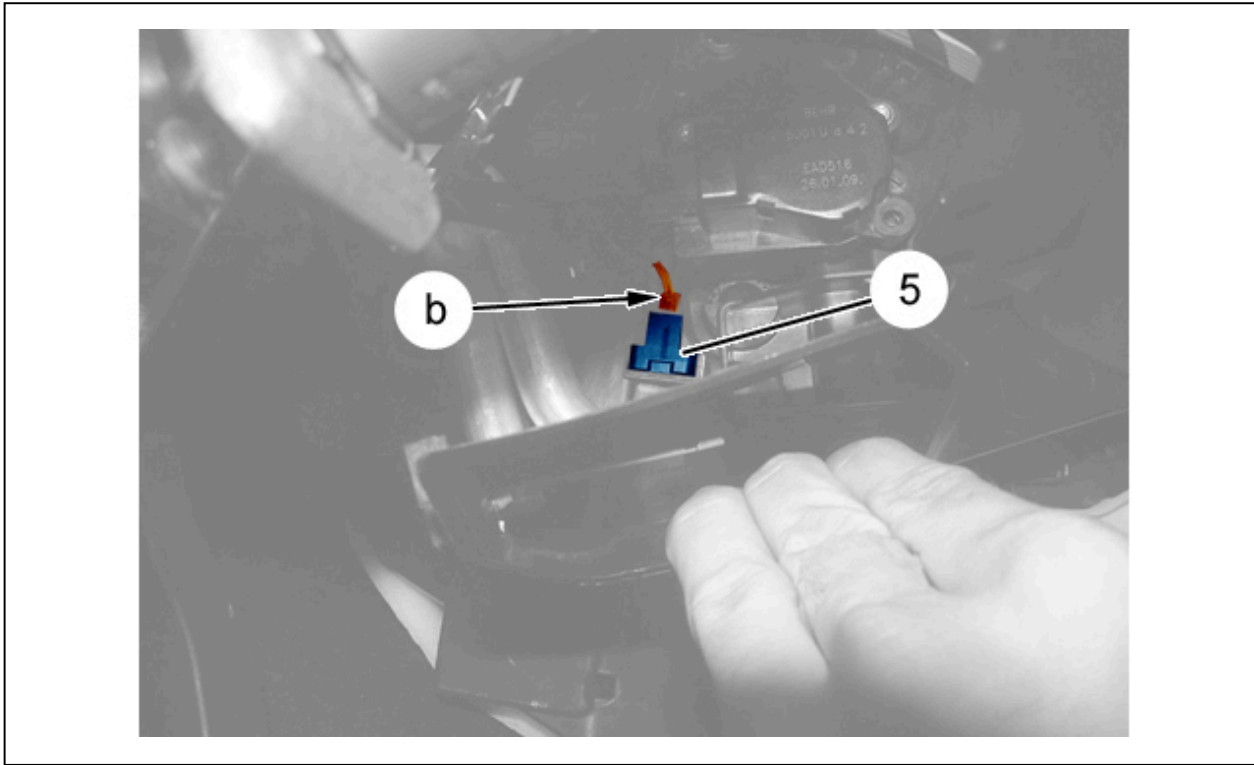


Figure : C5HG0G4D

Move aside the air duct .

Unclip the evaporator sensor (5).

Disconnect the connector (at "b").

2. Refitting

Connect the connector (at "b").

Refit :

- The evaporator sensor (5)
- The trim (4)
- The bolt (3)

Connect the lamp connector (If necessary).

Refit :

- The trim under the dashboard (2)
- The pins (1)

Reconnect the battery.

Check the operation of the air conditioning .

CAUTION : Perform the operations to be carried out following reconnection of the battery.
