

vehicle : XSARA PICASSO		OPR : 11390	
domain	General points	function	interconnections management
component			
D3BQ2EP0		INTERCONNECTIONS MANAGEMENT	

IC02 interconnection : harnesses 10 PR - 20 MOT (4V NR) TU5JP4

channel	wire no.	description
1	104	alternator charge information
2	1226	engine power relay control
3	1229	engine main relay control
4		

IC08A interconnection : harnesses 10 PR - 16 GMV (2V NR)

channel	wire no.	description
1	BF01/BF01A/BM03	cooling fan relay supply
2	MC10C/M1510	earth

IC08B interconnection : harnesses 10 PR - 16 GMV (6V NR)

channel	wire no.	description
1	1540	cooling fan control
2	1550	cooling fan control
3	CM01A	high speed fan supply relay
4	1590/1589	slow speed cooling fan relay
5		
6	1599	cooling fan diagnosis information

IC11A interconnection : harnesses 10 PR - 46 HAB (2V NR)

channel	wire no.	description
1		
2	856	vehicle speed information (navigation)

IC26 interconnection : harnesses 10 PR - 59 CLM (6V NR)

channel	wire no.	description
1	8051	evaporator sensor control
2	8052	evaporator sensor information
3	PM04	air conditioning panel control
4	M806	earth
5		
6		

IC56 interconnection : harnesses 10 PR - 51 J (6V NR)

channel	wire no.	description
1	M8093/MC33A	earth
2	8062	fuel pump supply - additional heating
3	1201	fuel pump control
4	MC36C	earth
5	4315	fuel gauge earth
6	433	fuel gauge information

IC59 interconnection : harnesses 10 PR - 25 PCH (6V BE)

channel	wire no.	description
1	CM01B/CM32C	3 relay protection switching control unit supply
2	8095	additional heating control
3		
4		
5	CM01J/CM24D	fuel pump supply - additional heating
6	8096A	additional heating control

IC60 interconnection : harnesses 20 MOT - 22 MOT/C (6V NR) TU5JP4

channel	wire no.	description
1	1321	cylinder 1 injector control

2	1322	cylinder 2 injector control
3	1210/1320	antipollution warning lamp control - injectors supply
4		
5	1323	cylinder 3 injector control
6	1324	cylinder 4 injector control

IC60 interconnection : harnesses 20 MOT - 22 MOT/C (4V NR) DV6ATED4 - DV6TED4

channel	wire no.	description
1	1184	Pre-heat plug 1 command
2	1185	Pre-heat plug 2 command
3	1186	Pre-heat plug 3 command
4	1187	Pre-heat plug 4 command

IC70 interconnection : harnesses 46 HAB - 60 P/C (23V NR)

channel	wire no.	description	channel	wire no.	description
1	6207/6208	lock information	13	642A	Rear view mirror retraction command
2			14	643A	Rear view mirror unfold command
3	6201	front LH lock unlocking control	15	6450	common LH rear view mirror motor information
4	6211	door locking control	16	6451	up/down LH rear view mirror motor information
5	6286/6285	lock information	17	6452	left/right LH rear view mirror motor information
6	8410/8430	front LH speaker control	18	604	front LH electric window opening control
7	8420/8440	front LH tweeter speaker	19	605	front LH electric window closing control
8	M6410/M6415	earth	20		
9			21		
10			22	813A	heated rear view mirrors control
11	BH09	battery +	23		
12			-		

IC71 interconnection : harnesses 46 HAB - 65 P/P (23V NR)

channel	wire no.	description	channel	wire no.	description
1	6207/6208	lock information	13	642B	Rear view mirror retraction command
2			14	643B	Rear view mirror unfold command
3	6202	front RH lock unlocking control	15	6453	Passenger mirror position potentiometer + command
4	6212	front LH lock locking/unlocking information	16	6454	up/down RH rear view mirror motor information
5	6285/6286	lock information	17	6455	left/right RH rear view mirror motor information
6	8430/8410	front RH speaker control	18	6071	front RH electric window opening control
7	8440/8420	front RH tweeter speaker	19	6061	front RH electric window closing control
8	MPP/M6420	earth	20	6432	external air temperature information
9			21	6433	external air temperature information
10			22	813B	heated rear view mirrors control
11			23		
12			-		

IC72 interconnection : harnesses 46 HAB - 62 PR/G (14V NR)

channel	wire no.	description	channel	wire no.	description
1	6203	front LH lock locking control	8	613	window lift motor
2	6213	front RH lock locking/unlocking information	9	612	window lift motor
3	6288/694	lock information	10		
4	845	left hand rear speaker	11	6243/6251	rear LH door opening control - rear LH door child safety information
5	846	left hand rear speaker	12		
6	M6212	earth	13		
7	6111	rear LH electric window closing control	14		

IC73 interconnection : harnesses 46 HAB - 67 PR/D (14V NR)

channel	wire no.	description	channel	wire no.	description
1	6204/6203	front RH lock locking control	8	617/613	window lift motor
2	6214/6213	front LH lock locking/unlocking	9	616/612	window lift motor

		information			
3	694/6287	lock information	10		
4	847/845	right hand rear speaker	11	6243/6250	rear RH door opening control - rear RH door child safety information
5	848/846	right hand rear speaker	12		
6	M6255/M6212	earth	13		
7	6118/6111	rear RH electric window closing control	14		

IC76 interconnection : harnesses 46 HAB - 55 SGC (4V VE)

channel	wire no.	description
1	6507/6509	lower front LH side airbag module
2	6508	lower front LH side airbag module
3		
4	MIC76	lower front LH side airbag module earth

IC77 interconnection : harnesses 46 HAB - 56 SGP (4V VE)

channel	wire no.	description
1	6509/6506	lower front RH side airbag module
2	6510/6507	lower front RH side airbag module
3		
4	MIC77	lower front RH side airbag module earth

IC83 interconnection : harnesses 46 HAB - 97 DEP (6V BE)

channel	wire no.	description
1	7511	inner LH rear sensor signal
2	7512	outer LH rear sensor signal
3	7514	outer RH rear sensor signal
4	7515	control for (+) rear proximity sensors
5	7513	inner RH rear sensor signal
6	7516	control for (-) rear proximity sensors

IC91A interconnection : harnesses 46 HAB - 50 P/B (2V BA)

channel	wire no.	description
1	6502	passenger's airbag module
2	6503	passenger's airbag module

IC91B interconnection : harnesses 46 HAB - 50 P/B (16V VE)

channel	wire no.	description	channel	wire no.	description
1	6173A	rear window lift inhibitor switch	9	6071	front RH electric window opening control
2	8410/8411	front LH speaker control	10		
3	8420/8421	front LH tweeter speaker	11	ME30	earth
4	8430/8431	front RH speaker control	12	604	front LH electric window opening control
5	8440/8441	front RH tweeter speaker	13	605	front LH electric window closing control
6	6546	passenger's airbag deactivation switch information	14	6117	rear electric windows locking control
7	6547	Passenger airbag neutralisation command	15		
8	ME34	earth	16	6061	front RH electric window closing control

IC92 interconnection : harnesses 50 P/B - 59 CLM (10V NR) - ventilation and heating

channel	wire no.	description	channel	wire no.	description
1			6		
2			7		
3	VE2	sidelamps + (BSI output)	8	M8060	earth
4			9		
5			10		

IC92 interconnection : harnesses 50 P/B - 59 CLM (10V NR) - with air conditioning

channel	wire no.	description	channel	wire no.	description
1	816	heated rear screen activation information	6		
2	817	heated rear screen warning lamp information	7		
3	VE2	sidelamps + (BSI output)	8	M8060	earth

4			9	
5	8053	air conditioning deployment control	10	

IC92 interconnection : harnesses 50 P/B - 59 CLM (10V NR) - with automatic air conditioning

channel	wire no.	description	channel	wire no.	description
1			6	8504	navigation description control 3
2			7	9004A	BUS VAN DATA
3			8	M8060	earth
4			9	9005A	BUS VAN DATA B
5			10		

property of PSA Peugeot Citroën

04/08/2026