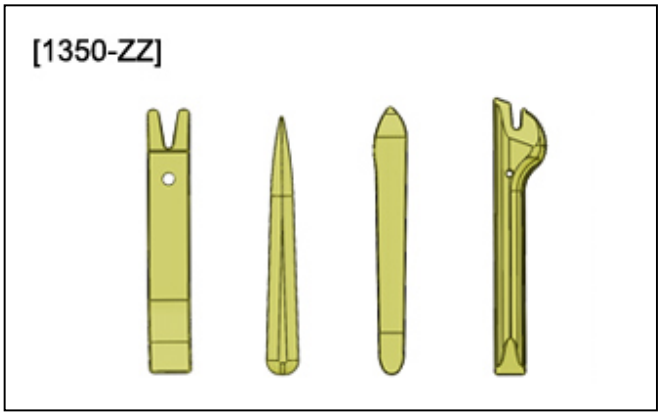
STRIPPING-ASSEMBLING : EXTERIOR MIRROR

ESSENTIAL : **Observe the safety and cleanliness recommendations** .

Key : **Operation symbols** .

1. Tooling

Tool	Reference	Description
 Figure : E5AG02MT	[1350-ZZ]	Stripping tools

2. Preliminary operations

Disconnect the ancillaries battery .
Remove :

- **The exterior mirror**
- **The mirror glass**

3. Stripping

3.1. Exterior rear view mirror glass motor

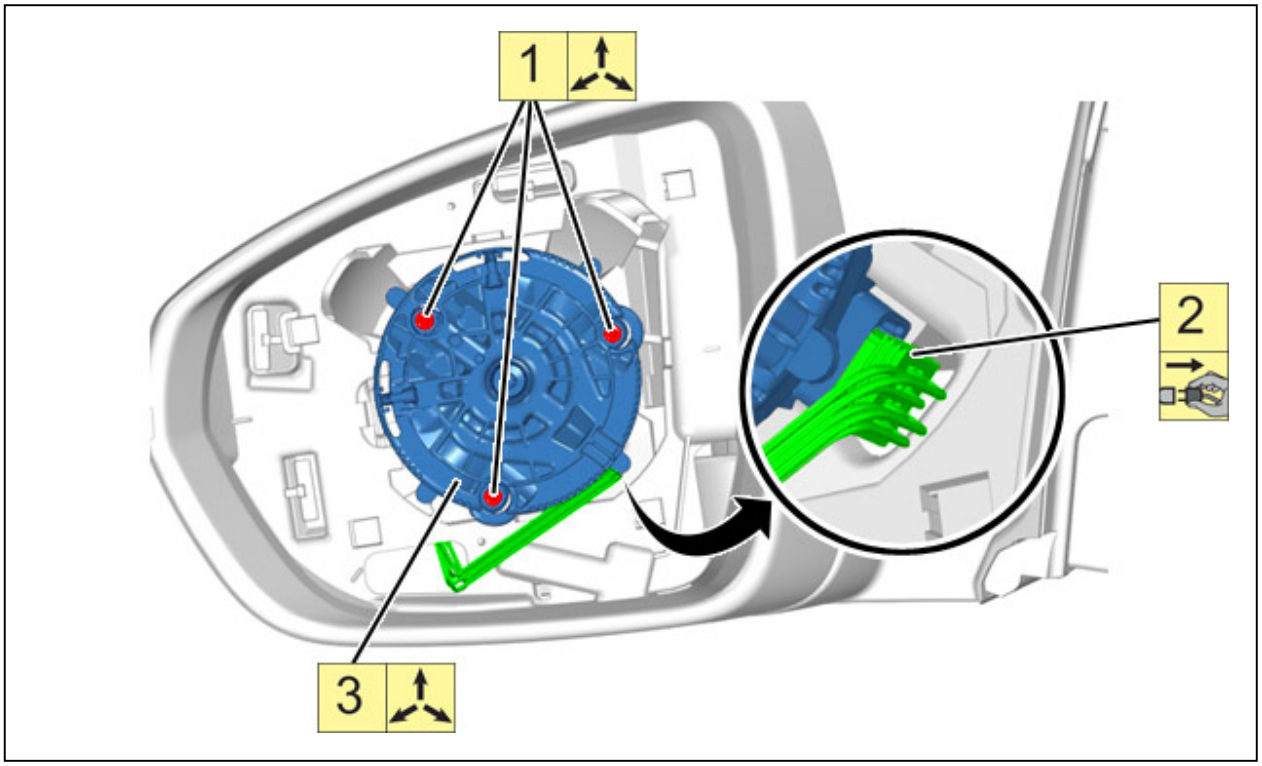


Figure : C4CS1JSD

3.2. Britax exterior mirror shell

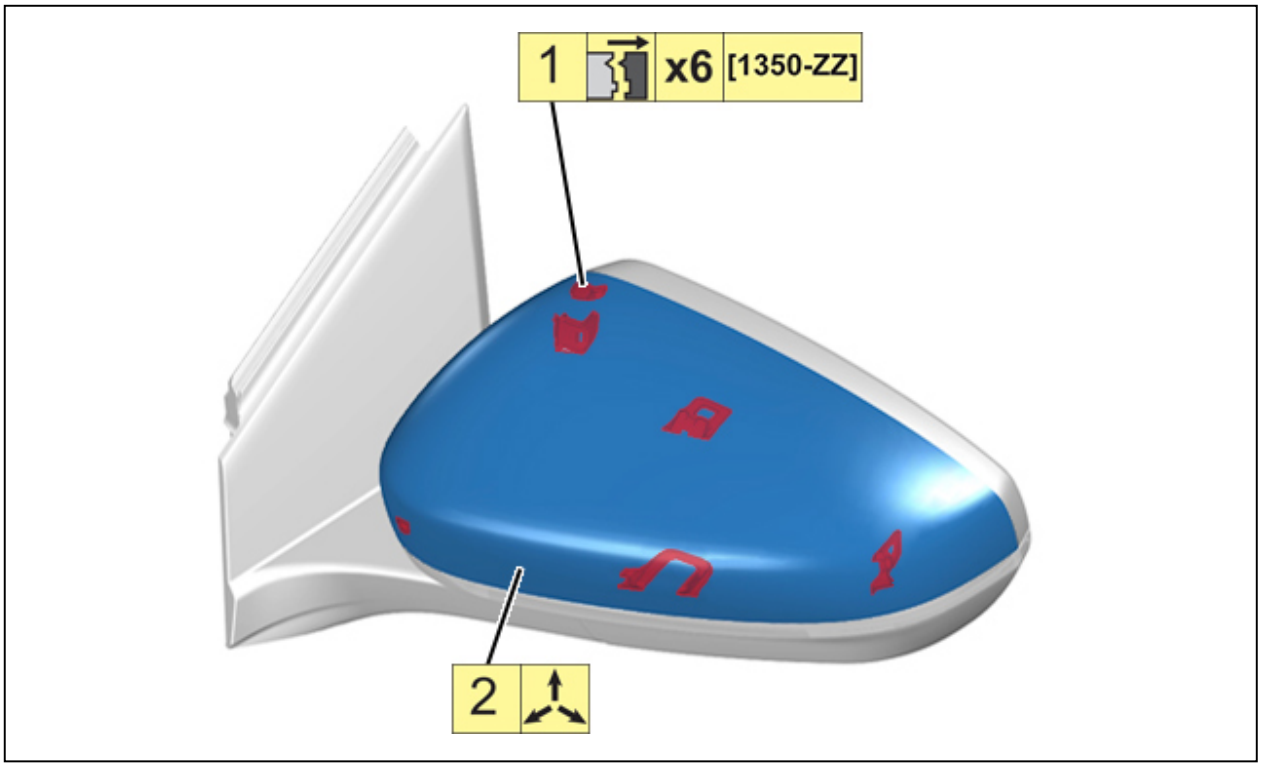


Figure : C4CS1JTD

3.3. Exterior temperature sensor

Remove the external temperature sensor .

3.4. Exterior mirror repeater

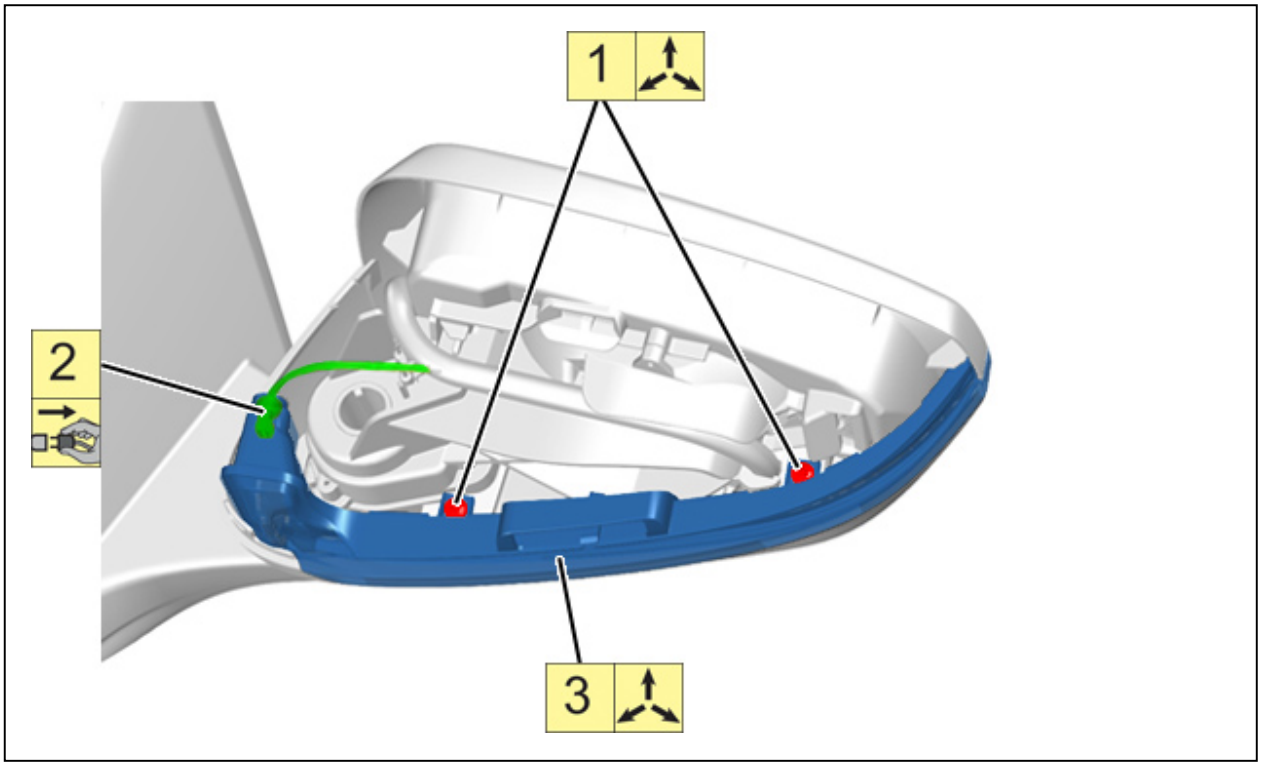


Figure : C4CS1JUD

3.5. Britax exterior mirror shell

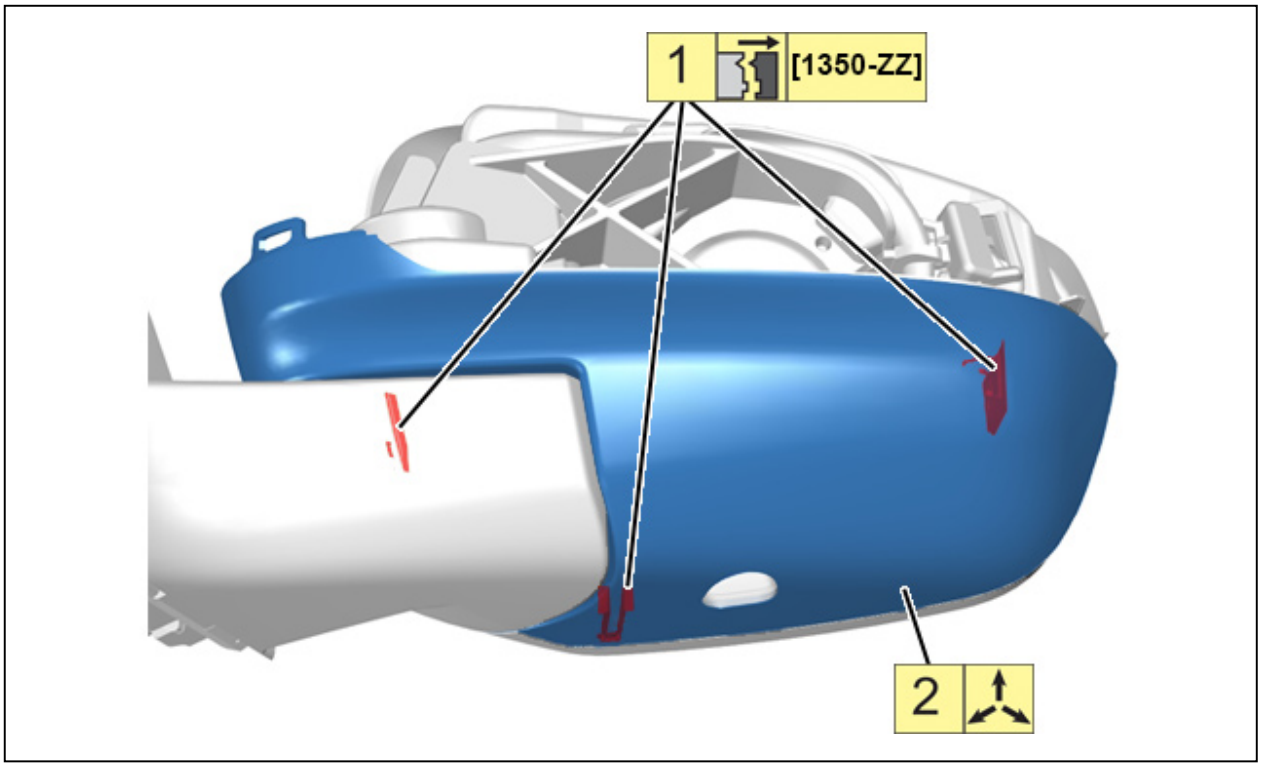


Figure : C4CS1JVD

3.6. Exterior rear view mirror sill light

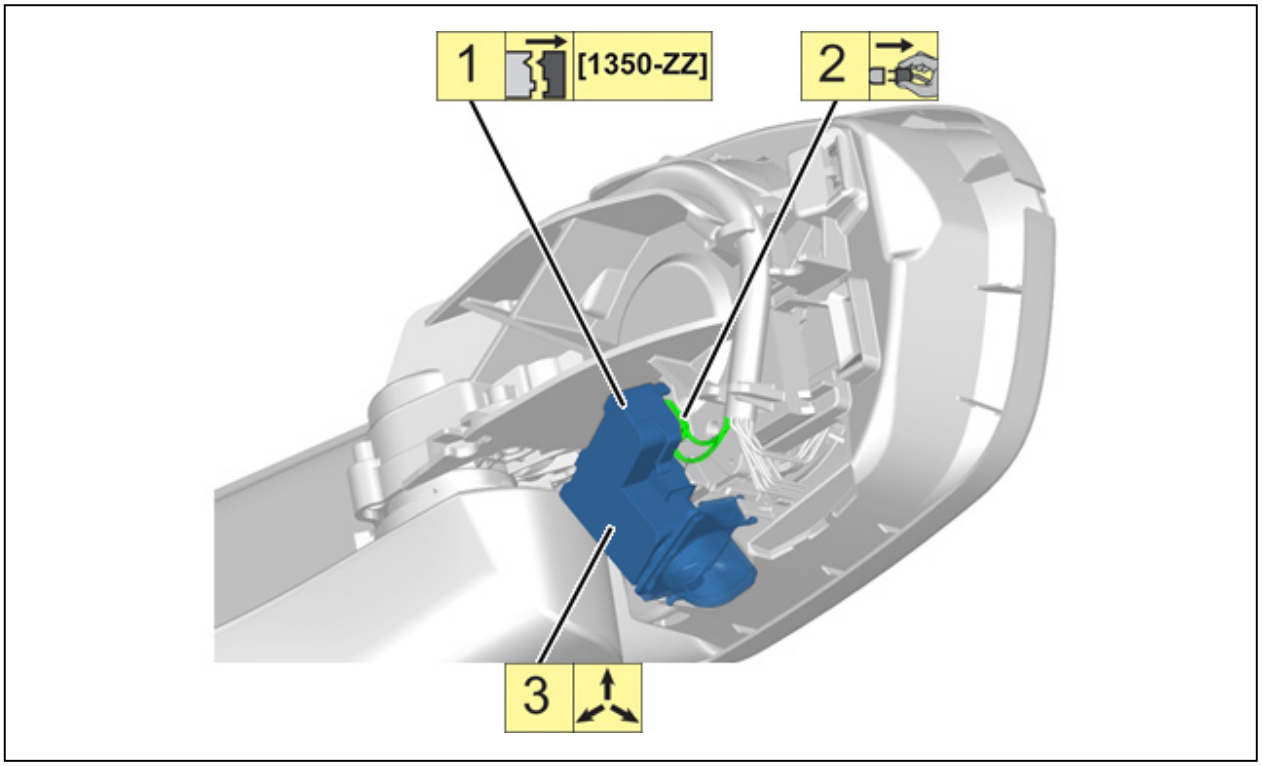


Figure : C4CS1JWD

3.7. Exterior rear view mirror shells

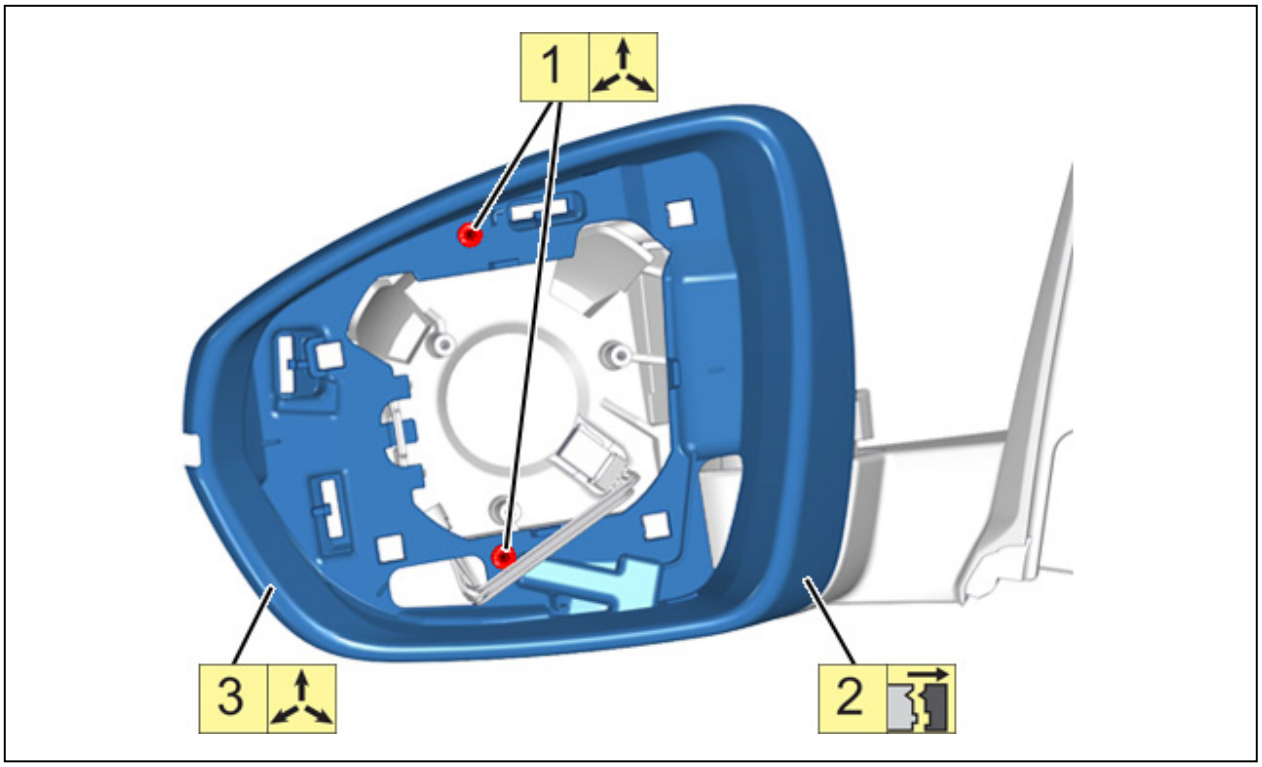


Figure : C4CS1JXD

3.8. Exterior rear view mirror frame

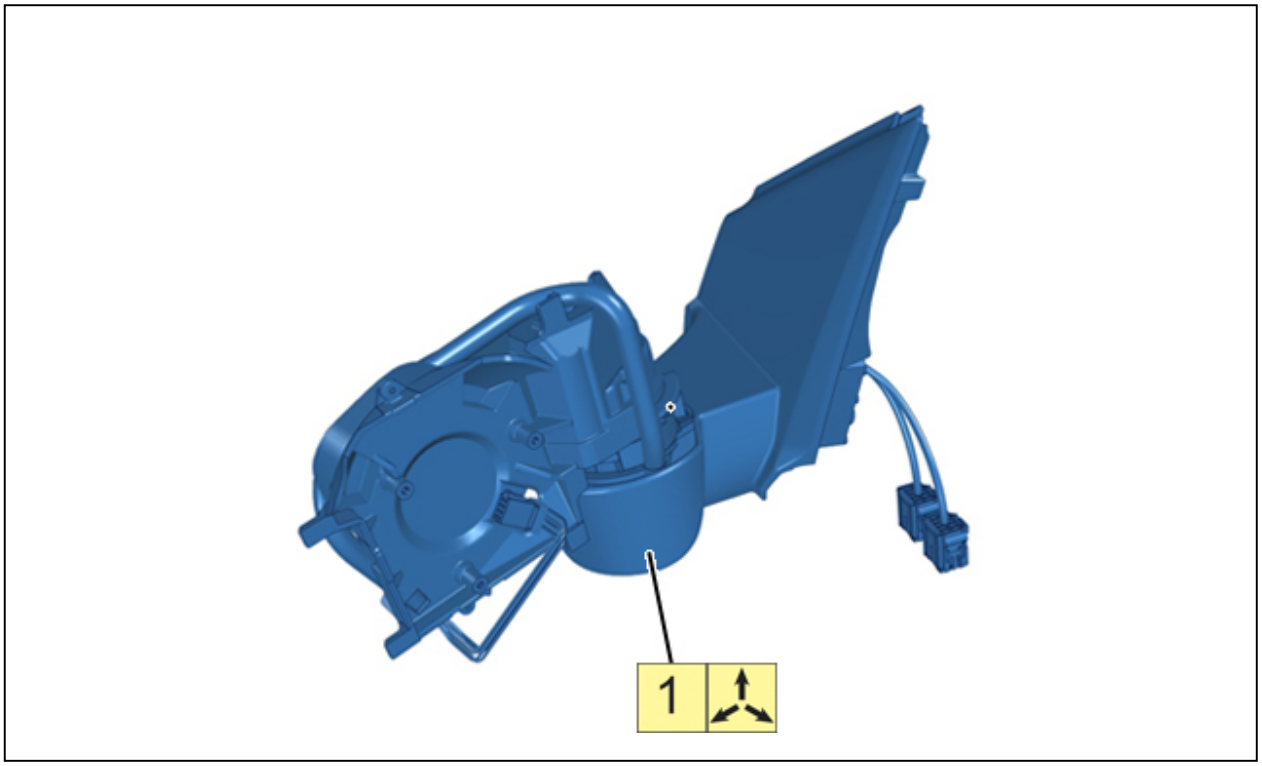


Figure : C4CS1JYD

4. Assembling

Carry out the operations in the reverse order to the stripping operations.

5. Additional operations

Refit :

- **The exterior mirror**
- **The mirror glass**

CAUTION : **Perform the operations that are required following a reconnection of the ancillaries battery** .

Reconnect the ancillaries battery.
Check the operation of the various equipment.